

SPARE PARTS CATALOGUE

P3500i


Power Generator | Generating sets

Valid for machine code: PF302SXB000

Revision: 0



P3500i- FRAME / TELAIO

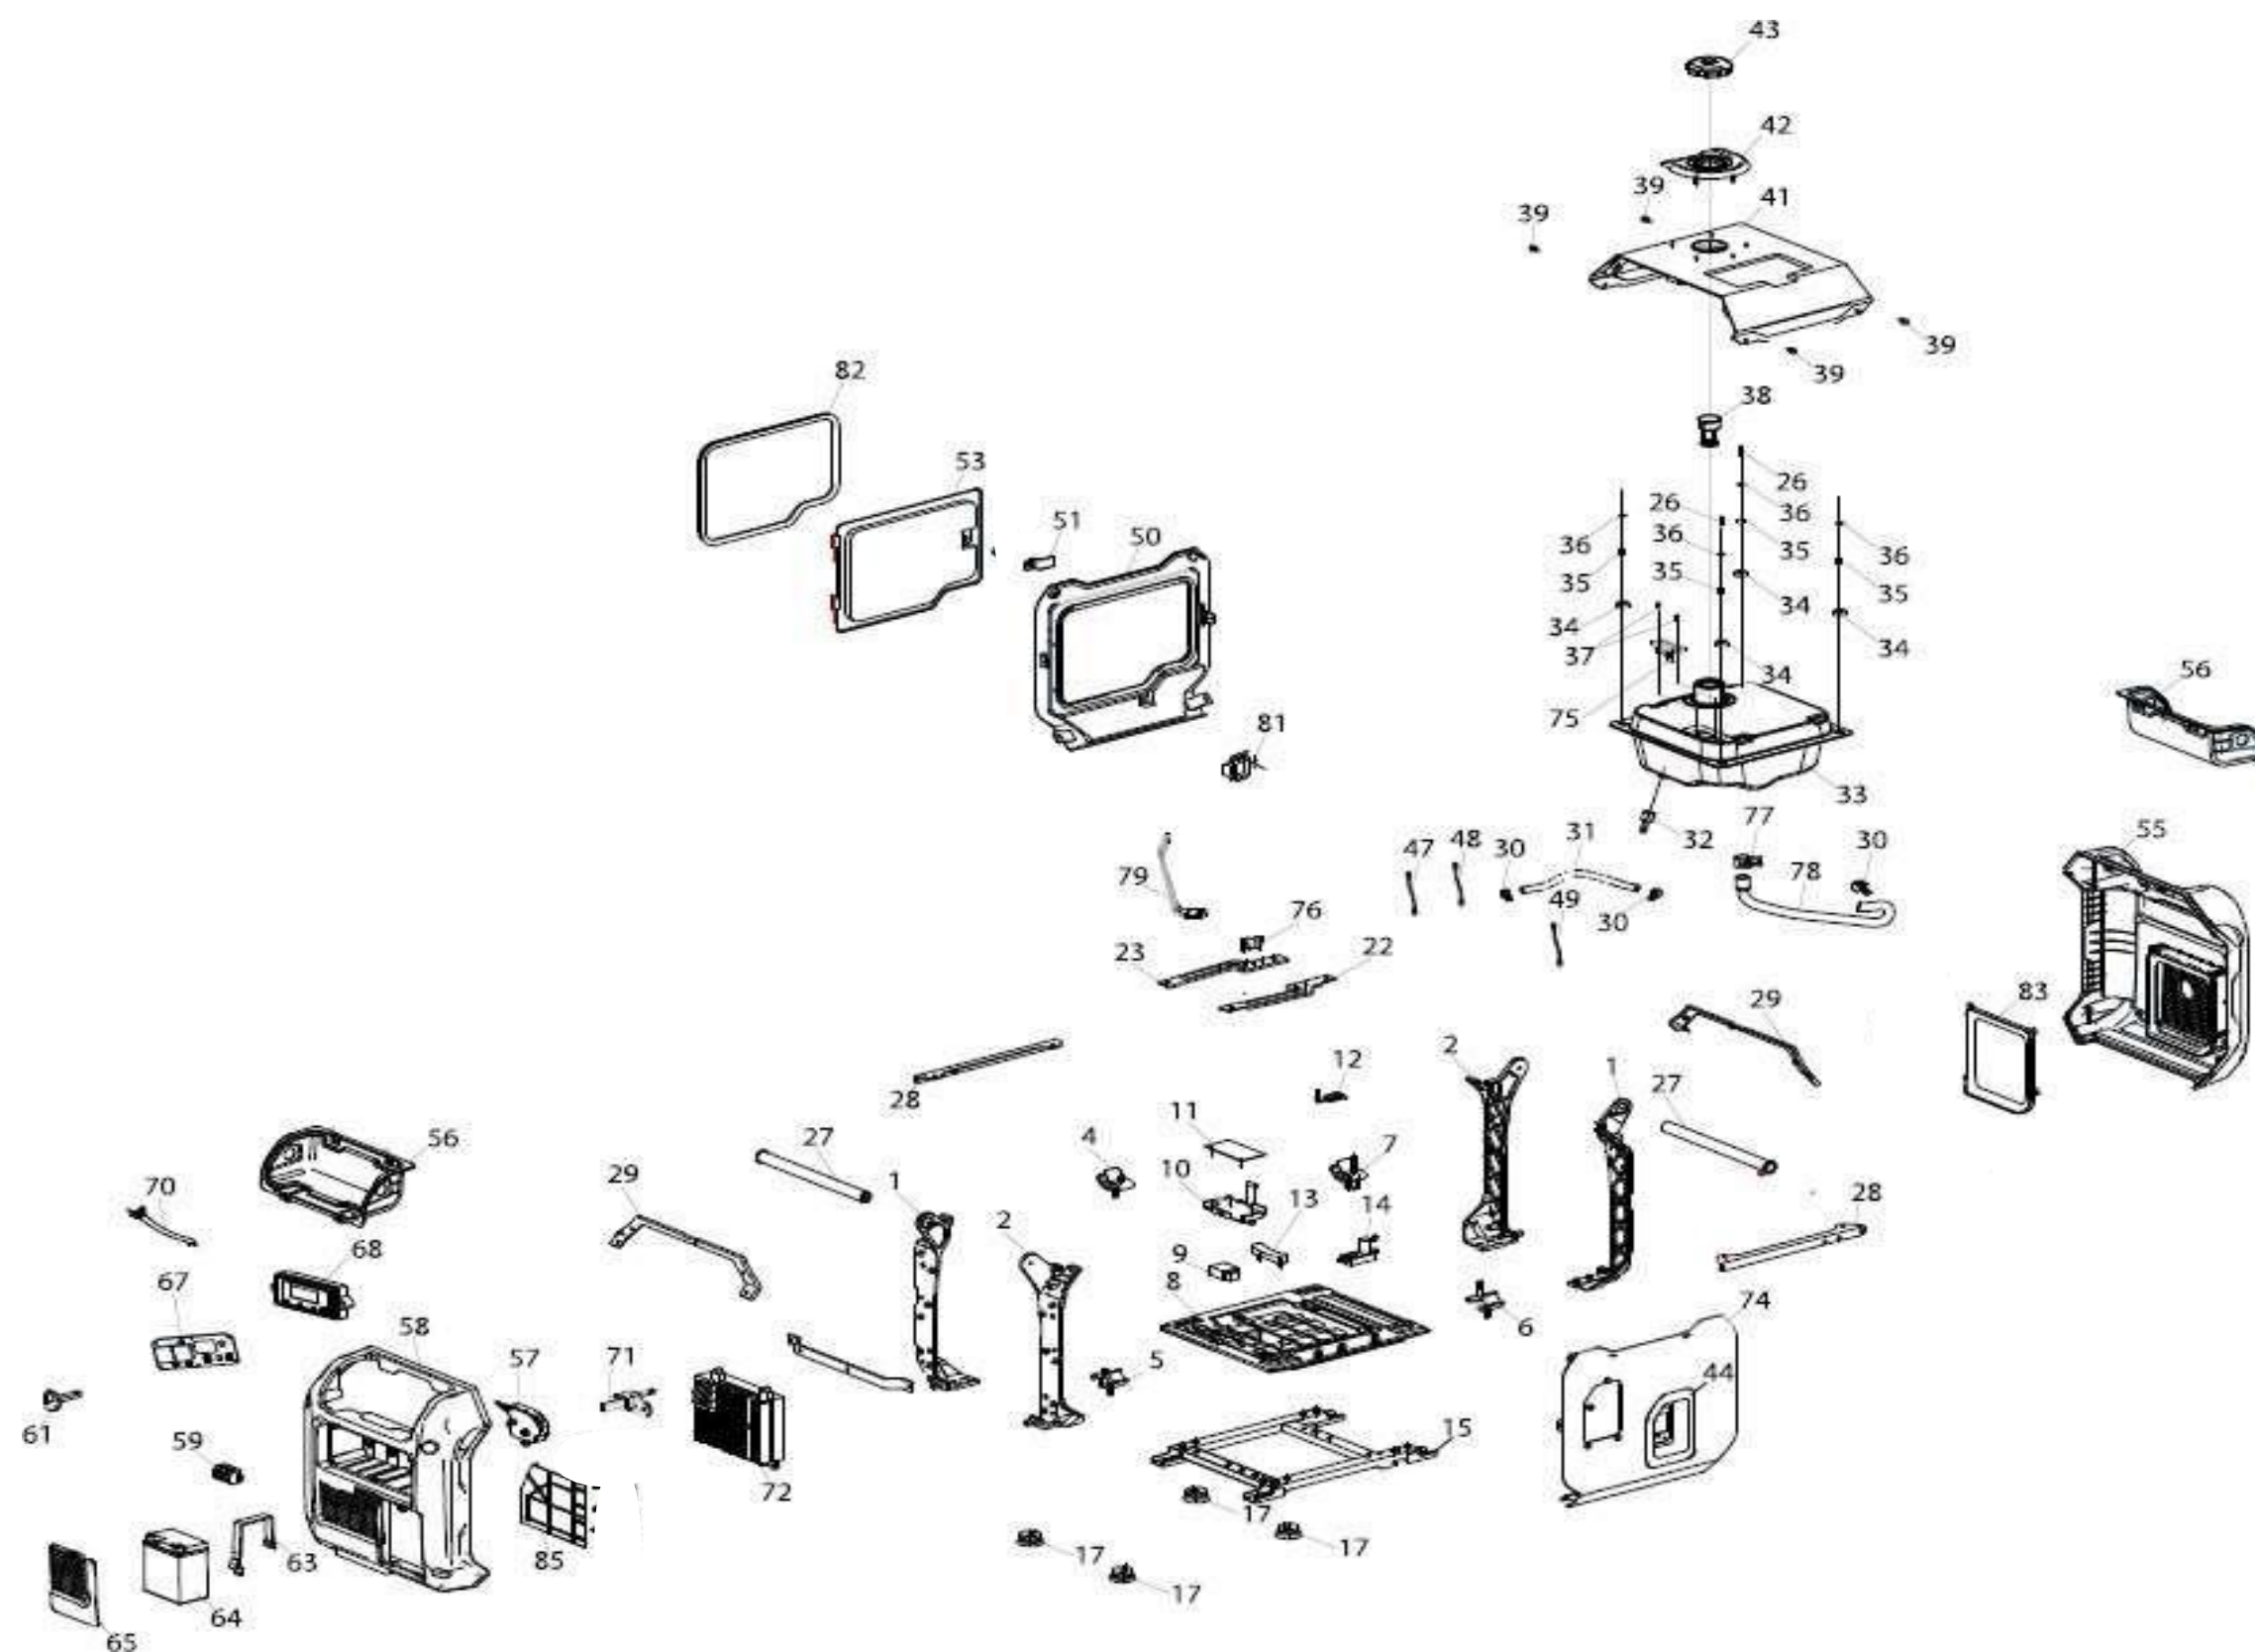

P3500i- FRAME / TELAIO

Position	Part Number	Description	Note
1	PGL00093	STANDING FRAME	
2	PGL00092	STANDING FRAME	
4	PGL00390	BUFFER SOCKET,ENGINE LEFT	
5	PGL00391	BUFFER SOCKET,ENGINE LEFT	
6	PGL00392	BUFFER SOCKET,ENGINE LEFT	
7	PGL00393	BUFFER SOCKET,ENGINE LEFT	
8	PGL00358	BACKPLANE ASSY.,FRAME	
9	PGL00410	CHARGER	
10	271110182-0001	CASE,BATTERY	
11	290340057-0001	BUMPING BLOCK	
12	381000309-0001	STOPPER	
13	290340040-0001	BUMPING BLOCK	
14	PGL00013	UNIT ASSY.,C.D.I.	
15	PGL00359	BACKPLANE,FRAME	
17	PGL00018	CUSHIONED SOCKET,RACK/SILENTBLOCK	
22	341950005-0001	SHOE PLATE,ENGINE	
23	341950006-0001	SHOE PLATE,ENGINE	
27	PGL00389	PIPE COMP.,STEERING HANDLE	
28	172840054-0001	BRACKET,FUEL TANK MOUNTING	
29	PGL00405	STRUT RAIL,RACK	
30	PGL00147	HOOP ASSY/CLIPCOMBINATION	
31	380750833-0001	TUBE,FUEL	
32	PGL00040	NOZZLE OF FUEL TANK	


P3500i- FRAME / TELAIO

Position	Part Number	Description	Note
33	PGL00037	FUEL TANKCOMP	
34	PGL00237	PAD,FUEL TANK CUSHION	
35	170710014-0001	LINING,FUEL TANK CUSHION PAD	
36	PGL00152	WASHER,PLAIN	
38	PGL00038	STRAINER ASSY.,POURING ORIFICE	
39	PGL00394	BUMPING BLOCK	
41	302850009-0002	COPING,FRAME	
42	PGL00394	BUMPING BLOCK	
43	PGL00039	CAP,FUEL TANK	
44	PGL00454	DECORATIVE COVER OF ROPE LEVER	
47	272980030-0001	GROUNDING LEAD,GENERATOR	
48	272980031-0001	GROUNDING LEAD,GENERATOR	
49	272980032-0001	GROUNDING LEAD,GENERATOR	
50	PGL00461	LEFT OUTER CASE OF GENERATOR	
51	194600006-0001	PALLET	
53	PGL00357	LEFT COVERING PLATE	
55	PGL00071	LOUVER	
56	PGL00072	SHIELD,STEERING HANDLE PIPE	
57	PGL00054	COMBINED SWITCH	
58	PGL00047	BASE,PANEL	
59	PGL00139	PLATE,WIRE HARNESS CONNECTING	
61	PGL00008	KNOB,FUEL SWITCH	
63	380900247-0001	BAND	

P3500i- FRAME / TELAIO


Position	Part Number	Description	Note
64	PGL00015	BATTERY ASSY	
65	PGL00110	COVER OF BATTERY MAINTENANCE POR	
67	PGL00036	CONTROL PANEL COMP	
68	PGL00002	INDICATOR GAUGE,MULTIFUNCTION	
70	272040168-0001	CORD,CONTROL PANEL	
71	PGL00057	SWITCH,FUEL	
72	PGL00009	FREQUENCY CONVERTER COMP	
74	PGL00099	RIGHT OUTER CASE OF GENERATOR	
75	PGL00045	SENSOR,FUEL LEVEL	
76	PGL00412	RUBBER OF OIL DRAINAGE	
77	PGL00272	HOOP ASSY	
78	380750693-0001	TUBE,FUEL	
79	300710112-0001	BRACKET,AIR CLEANER	
81	381000393-0001	STOPPER	
82	380841179-0001	RING,SEAL	
83	PGL00388	FAIRING	
85	PGL00414	AIR INLET GUIDING PLATE OF FREQUENCY CONVERTER	

P3500i- FRAME / TELAIO

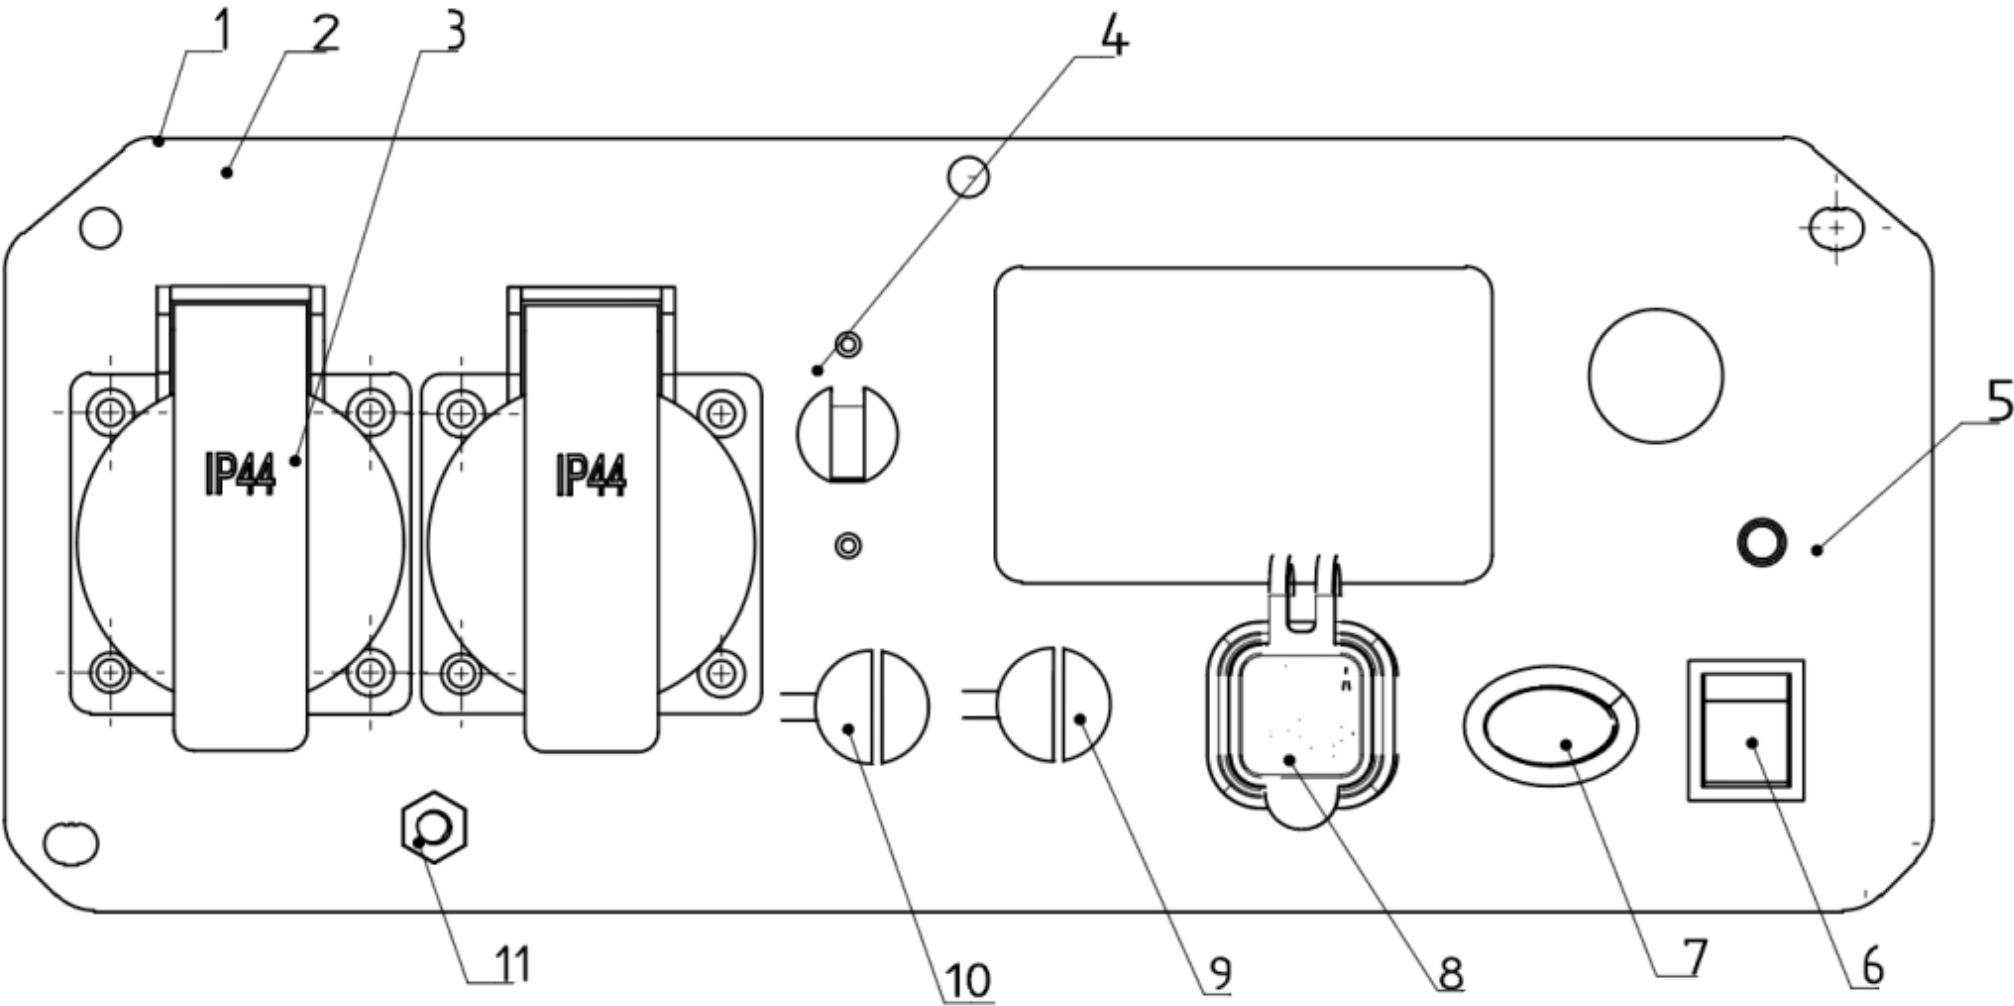

Position	Part Number	Description	Note
2	370325433-0001	Applique	
3	PGL00253	POWER SOCKET 16A/250V	
4	PGL00113	Overcurrent protector BSB31 400V 50-60Hr 10A 12,5A	
5	PGL00438	Rectifier	
6	271810035-0002	Circuit Breaker	
7	PGL00118	Idle switch	
8	PGL00254	USB/AUX	
9	381070011-0002	Socket	
10	381070011-0001	Socket	

P3500i- Engine / Motore

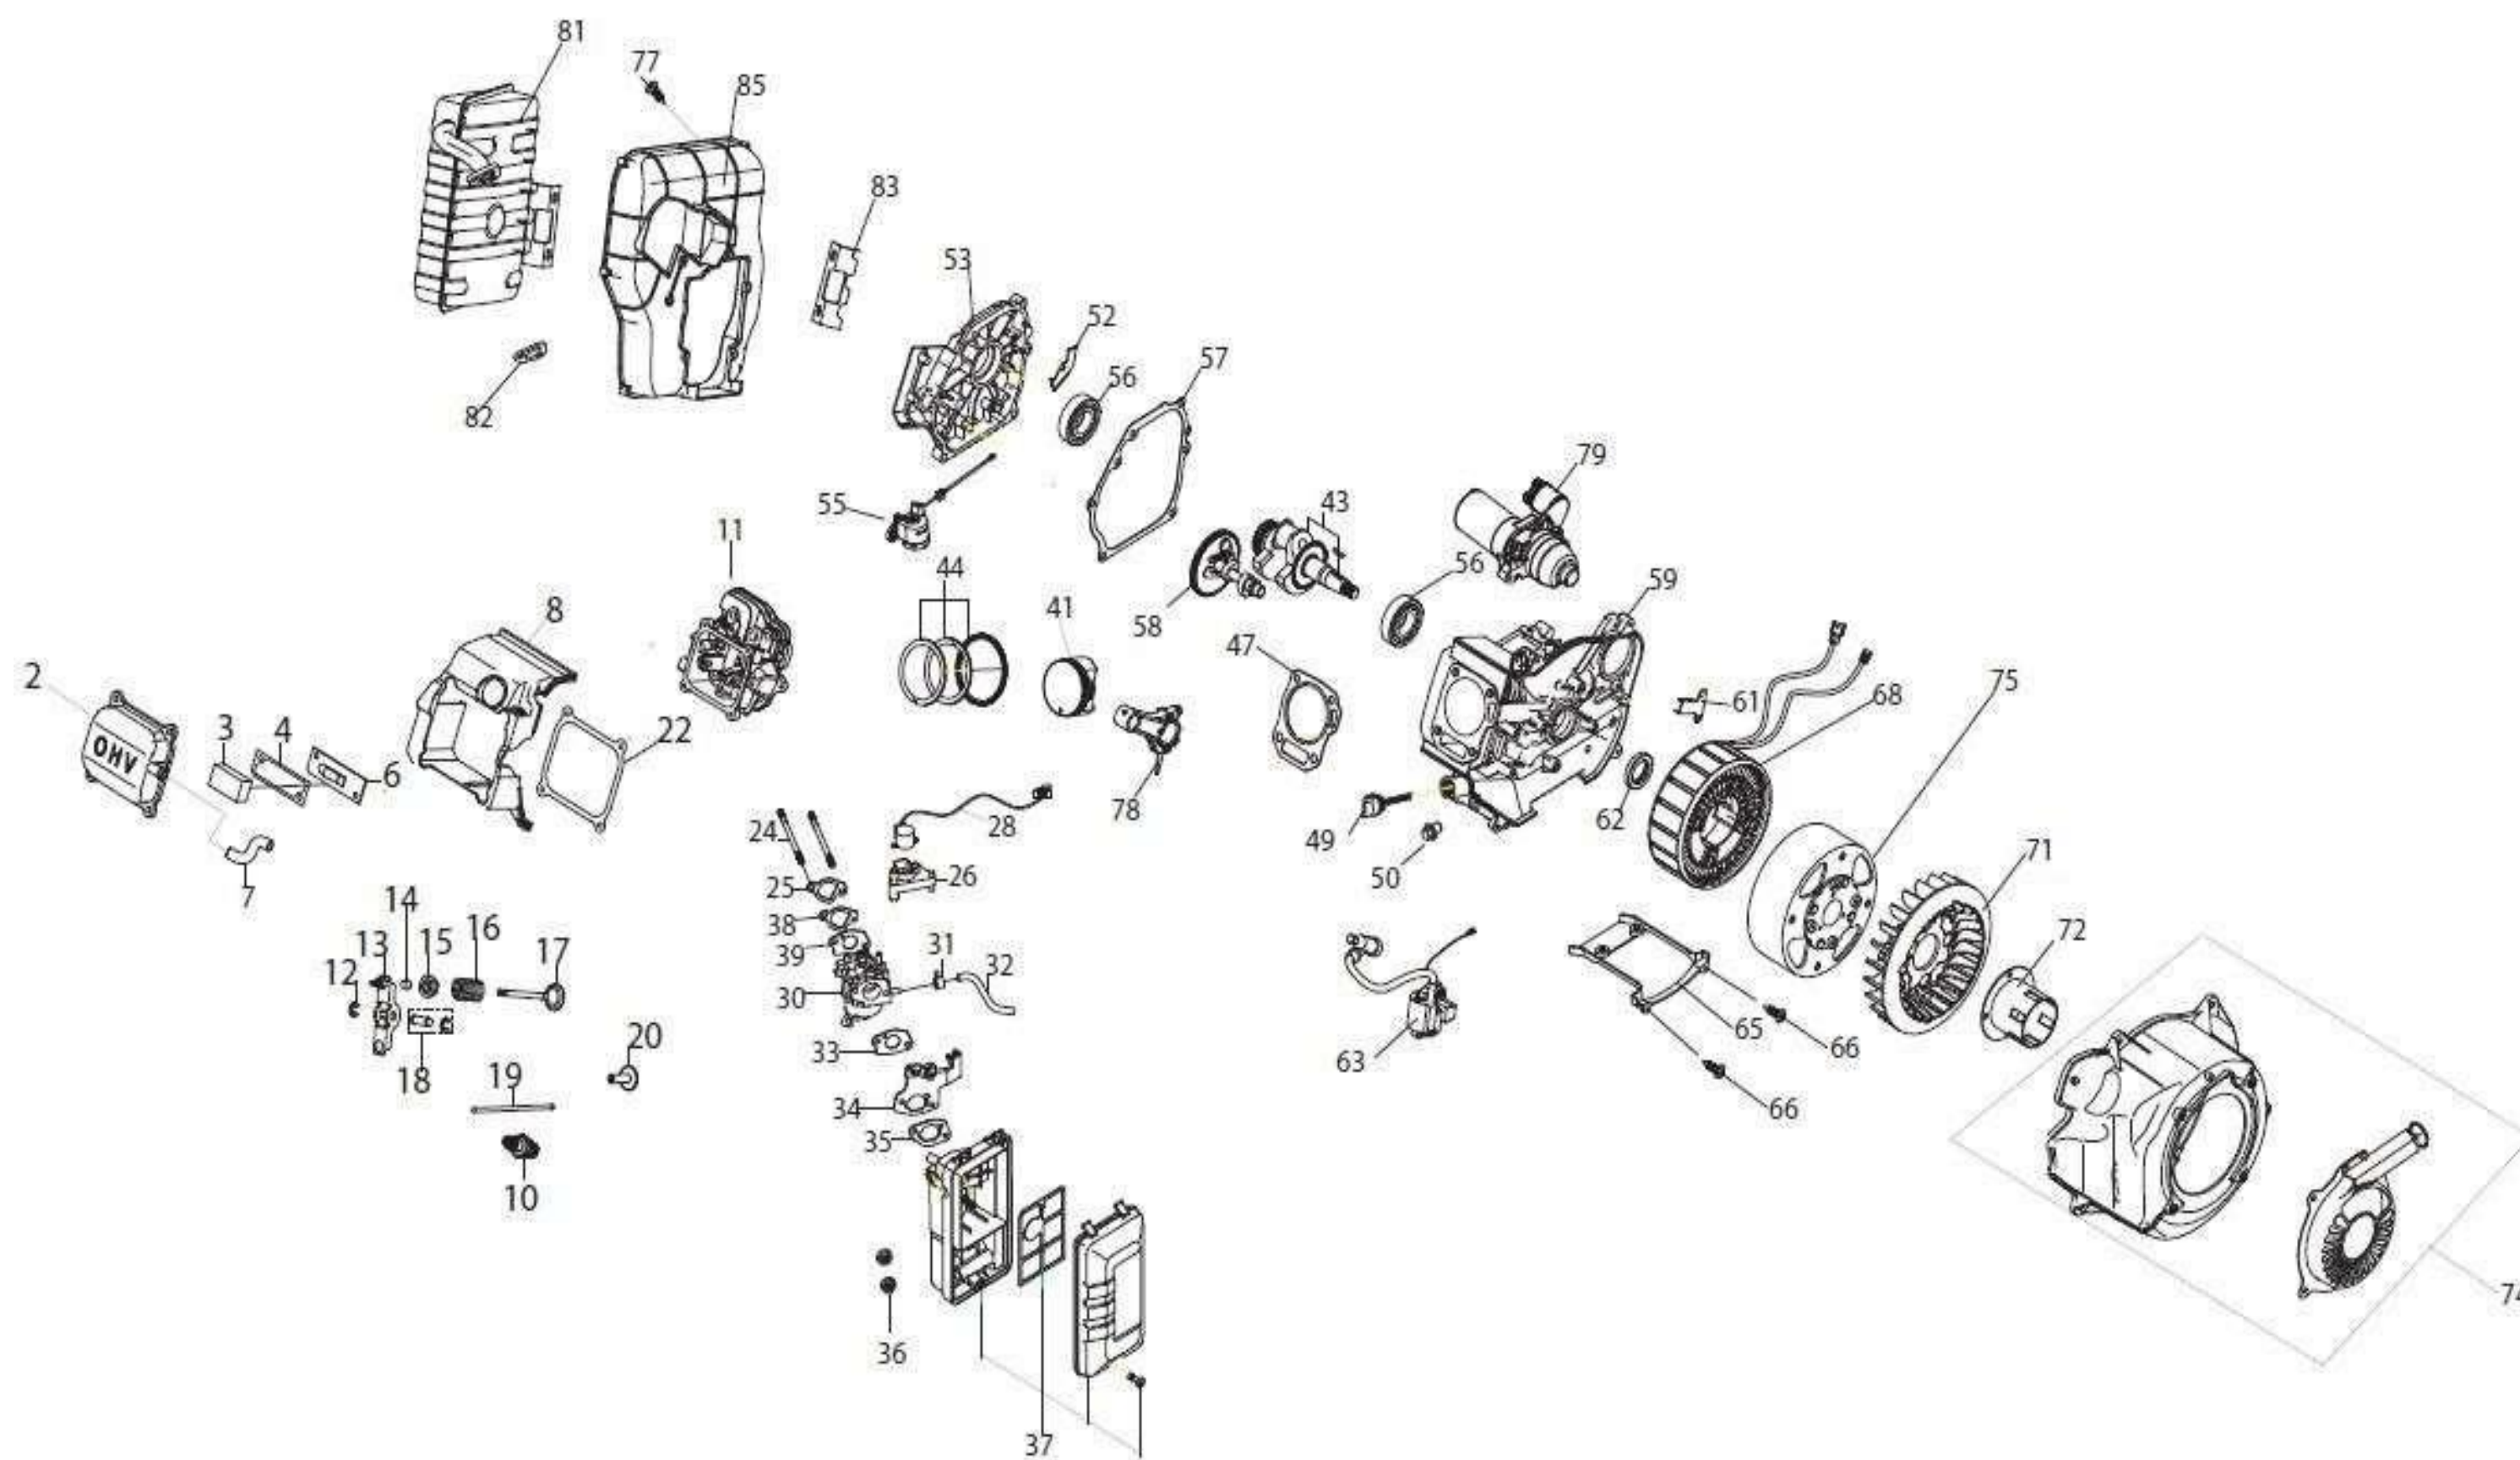

P3500i- Engine / Motore

Position	Part Number	Description	Note
2	PGL00425	Cylinder head cover	
3	PGL00416	Engine oil Strainer	
4	110850018-0001	PACKING, BREATHER CHAMBER	
6	110840024-0001	CAP,BREATHER CHAMBER	
7	380741339-0002	Breather tube	
8	160190092-0001	air deflector	
10	PGL00030	Sparkplug	
11	PGL00430	Cylinder head	
12	PGL00431	Split damping ring	
13	PGL00432	Valve rocker combination	
14	PGL00433	Valve adjustment cap	
15	PGL00095	Retainer, valve spring	
16	PGL00462	Inner spring of valve	
17	PGL00094	Valve Kit	
18	PGL00434	Valve rocker shaft	
19	PGL00435	Push rod	
20	PGL00436	Lifter, Valve	
21	140400016-0001	Valve oil seal	
22	PGL00356	Gasket for cylinder head cover	
24	380180095-0001	Stud	
25	PGL00415	Carburetor gasket	
26	PGL00059	Mounting bracket of speed-regulated step motor	
28	PGL00081	Stepping motor	
30	PGL00021	Carburetor	

P3500i- Engine / Motore

Position	Part Number	Description	Note
32	380750693-0001	Oil tube	
33	PGL00105	Carburetor gasket	
34	PGL00106	Choke valve bracket	
37	PGL00014	Air filter	
38	PGL00453	Heat insulating pad for carburetor	
41	130030208-0001	Piston	
43	130290447-0001	crankshaft	
44	PGL00402	Piston ring combination	
47	PGL00107	Gasket for cylinder head	
48	PGL00296	location pin	
49	110690073-0001	Oil rule combination	
52	110480032-0001	Pressing plate	
53	110820122-0001	Crankcase cover	
55	PGL00056	Oil level sensor	
56	PGL00481	Bearing	
57	PGL00077	Crankcase cover gasket	
58	140020114-0001	Camshaft assy	
59	110810447-0001	Crankcase body	
60	PGL00120	Location wire nail	
61	110480030-0001	Pressing plate	

P3500i- Engine / Motore

Position	Part Number	Description	Note
62	380650347-0001	Oil seal	
63	PGL00042	COILASSY.,IGNNTION	
65	160200054-0001	Side plate	
68	PGL00103	Motorstator	
71	PGL00457	Motor fan	
72	193590035-0001	Starting disc	
74	PGL00058	Fan cover comp.	
75	PGL00086	Motorrotor	
77	380310137-0001	Cross recessed pan head tapping screw	
78	PGL00449	Connecting rod	
79	PGL00003	Components of starting motor	
81	PGL00119	Mufflerbody	
83	180990090-0001	Muffler bracket	
85	PGL00442	Muffler guard shield	

PRAMAC

SERVICE & PARTS