

SPARE PARTS CATALOGUE


PMi4500

Consumer Generator | Generating sets

Valid for machine code: PR382SXB000

Revision: 0

FRAME

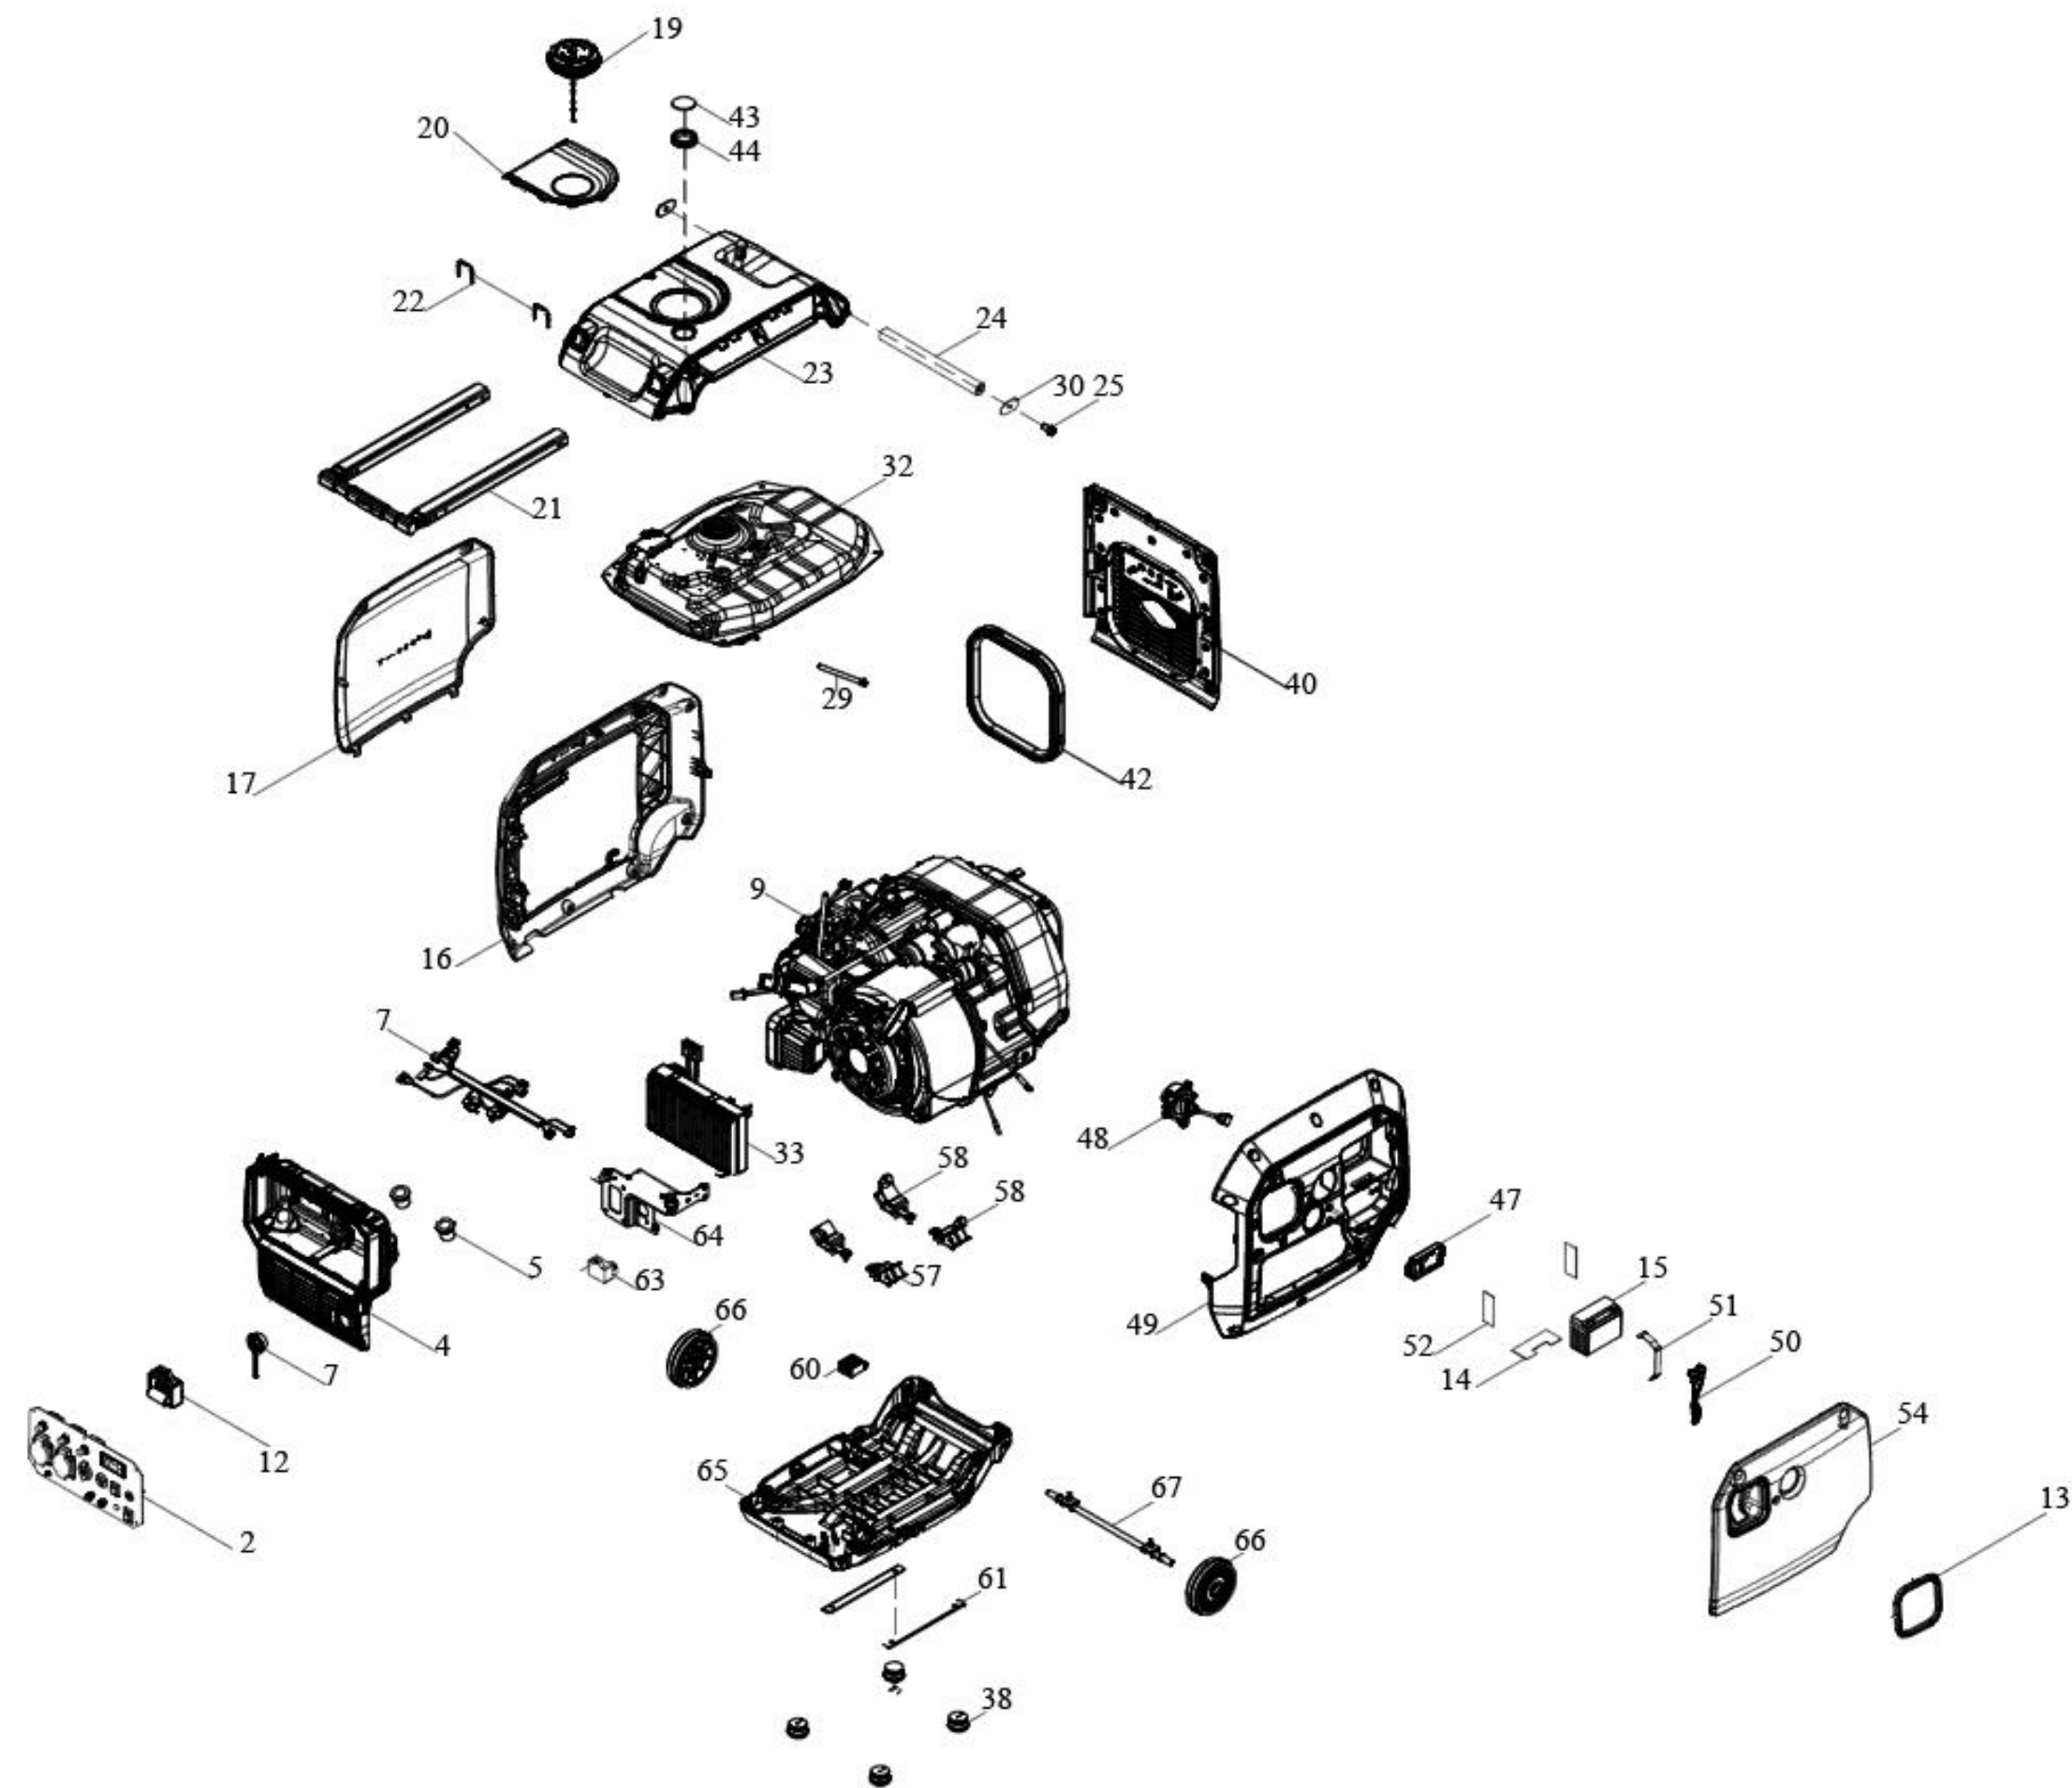


FRAME

Position	Part Number	Description	Note
2	PGZ00001	Control Panel	
4	PGZ00002	Front Cover	
5	PGZ00003	Wire Jacket	
7	PGZ00004	Wire Harness	
8	PGZ00005	Seat	
9	PGZ00006	Engine	
12	PGZ00007	Ignition Module	
13	PGZ00008	Appearance Protect	
14	PGZ00009	Scum	
15	PGZ00010	Battery	
16	PGZ00011	Left Hull	
17	PGZ00012	Left Cover Board Assembly	
19	PGZ00013	Fuel Cap	
20	PGZ00014	Fuel Tank Outlet Seal ring	
21	PGZ00015	Adjustable Handle	
22	PGZ00016	Draw Bar Circlip	
23	PGZ00017	Upper Housing Assem	
24	PGZ00018	Upper Handle Assembly	
28	PGZ00019	Clamp	
29	PGZ00020	Fuel Hose	
30	PGZ00021	Stop Board	
31	PGZ00022	Clip	
32	PGZ00023	Fuel Tank	
33	PGZ00024	Inverter	
37	PGZ00025	Clip	
38	PGZ00026	Rubber Cap	

FRAME

Position	Part Number	Description	Note
40	PGZ00027	Rear Cover	
42	PGZ00118	Gasket, Muffler	
43	PGZ00028	Rubber Ring	
44	PGZ00029	Lamina Lucida	
47	PGZ00030	Remote Controller	
48	PGZ00031	Tank	
49	PGZ00032	Right Hull	
50	PGZ00033	Battery Connecting Wire	
51	PGZ00034	Tape	
52	PGZ00035	Scum	
54	PGZ00036	Right Cover Board	
56	PGZ00037	Damping Pad	
57	PGZ00038	Damping Pad	
58	PGZ00039	Damping Pad	
60	PGZ00040	Rectifier	
61	PGZ00041	Bottom Case Bracket	
63	PGZ00042	Charger	
64	PGZ00043	Support Frame	
65	PGZ00044	Switch Box Base	
66	PGZ00045	Wheel	
67	PGZ00046	Wheel Shaft Assembly	


CONTROL PANEL

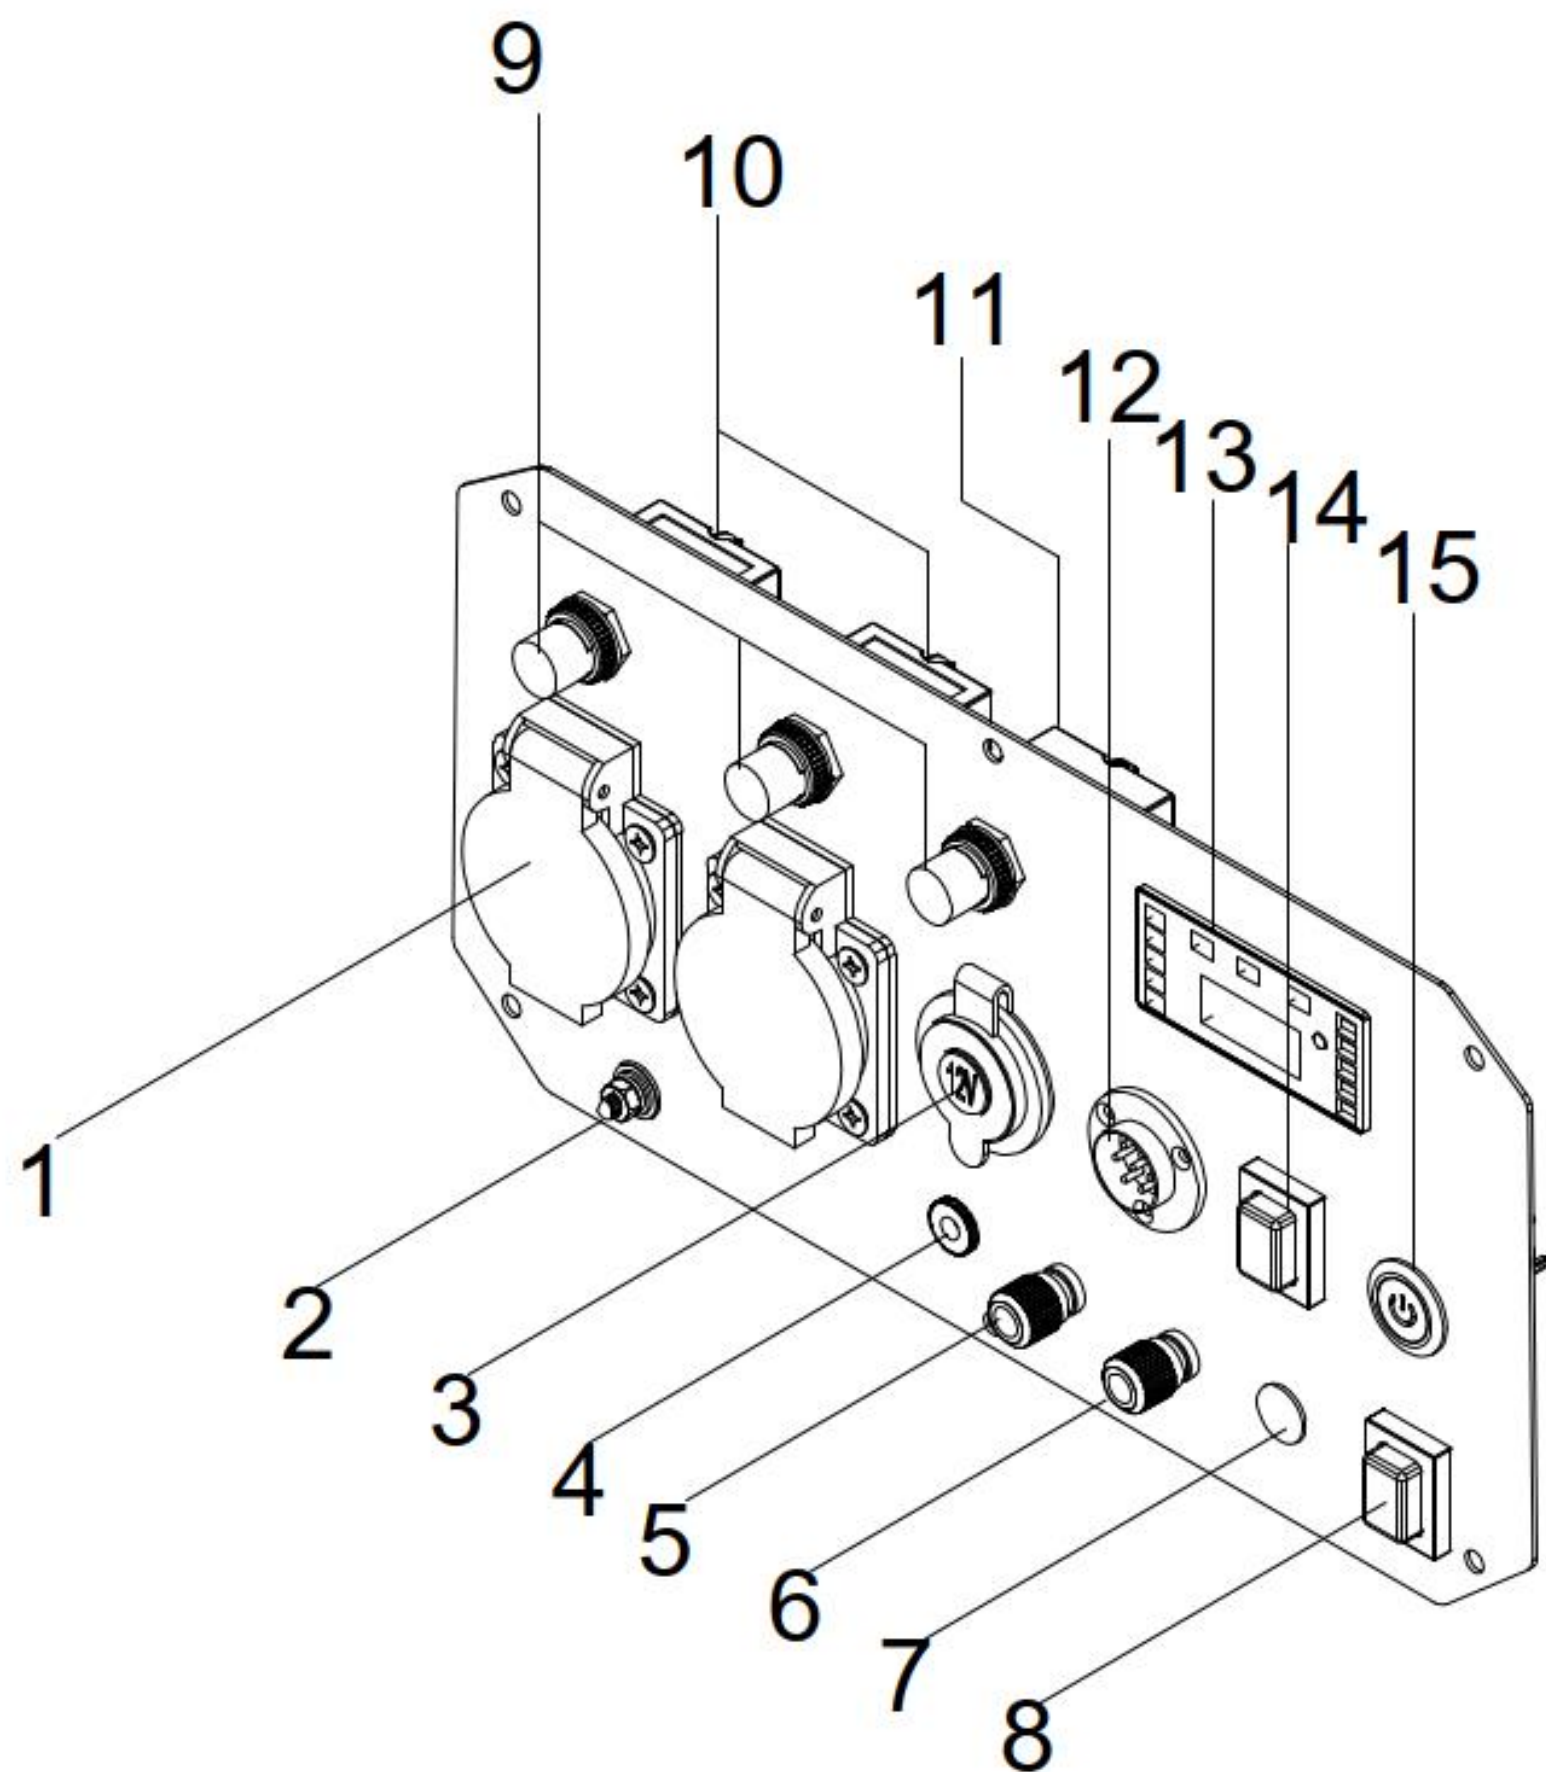

CONTROL PANEL

Position	Part Number	Description	Note
1	PGZ00114	Socket	
2	PGZ00101	Earth Wire	
3	PGZ00119	Socket	
4	PGZ00120	Charger Port	
5	PGZ00121	Anode Terminal	
6	PGZ00122	Cathode Terminal	
7	PGZ00123	Operation Indicator	
8	PGZ00124	Stop Switch	
9	PGZ00125	Waterproof Cap	
10	PGZ00126	Breaker	
11	PGZ00127	Breaker	
12	PGZ00128	Socket	
13	PGZ00129	Digital Meter	
14	PGZ00130	Stop Switch	
15	PGZ00131	Push-Button Start	

ENGINE

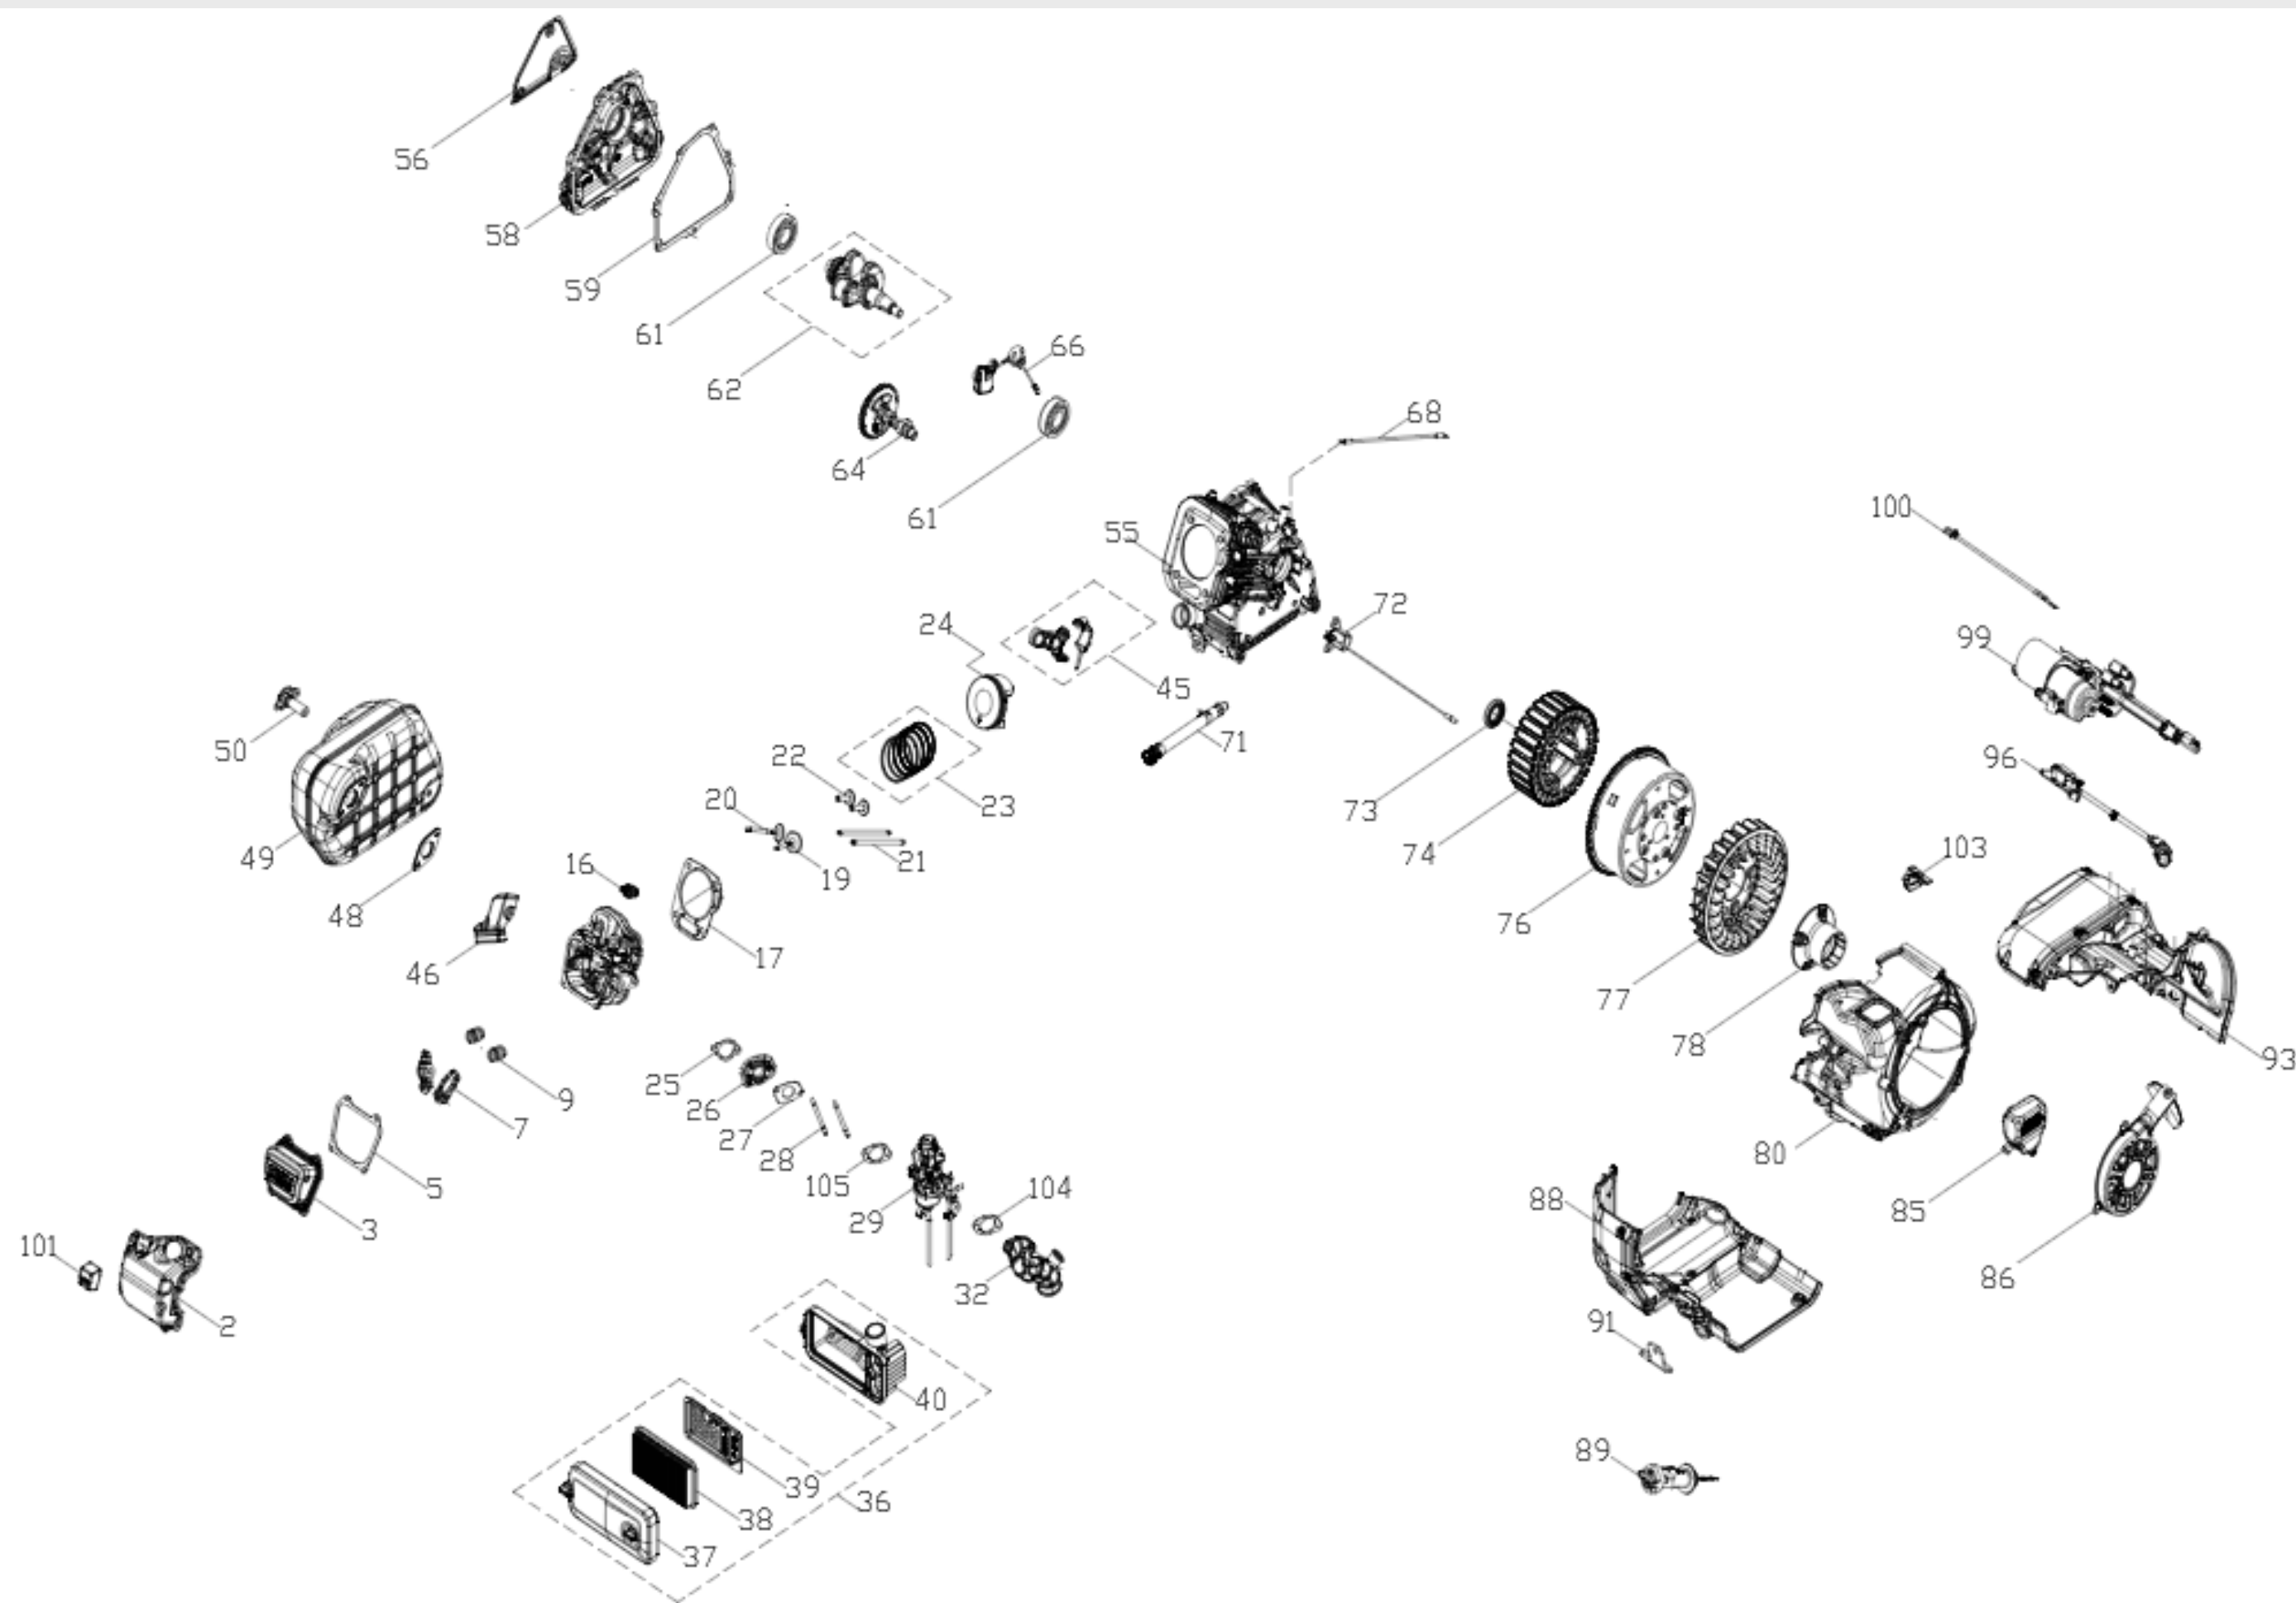

ENGINE

Position	Part Number	Description	Note
2	PGZ00047	Valve Cover	
3	PGZ00048	Valve Cover	
4	PGZ00049	Breather Hose	
5	PGZ00050	Gasket, Valve Cover	
7	PGZ00051	Rocker Arm Assembly	
8	PGZ00052	Rocker Arm Coreshaft	
9	PGZ00053	Valve Spring	
10	PGZ00054	Valve Adjust Cap, Exhaust	
11	PGZ00055	Valve Spring Seat	
12	PGZ00056	Valve Locker	
13	PGZ00057	Intake Valve Seal	
15	PGZ00058	Cylinder Head	
16	PGZ00059	Spark Plug	
17	PGZ00060	Gasket, Cylinder Head	
19	PGZ00061	Intake Vavle	
20	PGZ00062	Exhaust Valve	
21	PGZ00063	Push Rod	
22	PGZ00064	Tappet	
23	PGZ00065	Piston Ring Set	
24	PGZ00066	Piston	
25	PGZ00067	Gasket, Carburetor Insulator	
26	PGZ00068	Insulator	
27	PGZ00069	Gasket, Carburetor	
29	PGZ00070	Carburetor	
30	PGZ00071	Fuel Hose	

ENGINE

Position	Part Number	Description	Note
32	PGZ00072	Intake Manifold	
36	PGZ00073	Air Filter Assembly	
37	PGZ00074	Air Filter Cover Assembly	
38	PGZ00075	Air Filter Element	
39	PGZ00076	Air Filter Baffle	
40	PGZ00077	Air Filter Base Assembly	
45	PGZ00078	Connecting Rod Assembly	
46	PGZ00079	Shroud	
48	PGZ00080	Gasket, Muffler	
49	PGZ00081	Muffler	
50	PGZ00082	Spark Arrester	
55	PGZ00083	Crankcase	
56	PGZ00084	Shroud	
58	PGZ00085	Crankcase Cover	
59	PGZ00086	Gasket, Crankcase	
61	PGZ00087	Bearing, 6205E	
62	PGZ00088	Crankshaft	
63	PGZ00089	Woodruff Key	
64	PGZ00090	Camshaft	
66	PGZ00091	Oil Sensor	
68	PGZ00092	Earth Wire	
71	PGZ00093	Oil Drainpipe	
72	PGZ00094	Trigger	
73	PGZ00095	Oil Seal, φ25×φ41.25×6	
74	PGZ00096	Stator Assembly	

ENGINE

Position	Part Number	Description	Note
76	PGZ00097	Rotor Assembly	
77	PGZ00098	Cooling Fan	
78	PGZ00099	Starter Cup	
80	PGZ00100	Blower Housing	
85	PGZ00102	Resonant Cavity	
86	PGZ00103	Recoil Starter	
88	PGZ00105	Blower Housing	
89	PGZ00106	Dipstick	
91	PGZ00107	Fuel Hose Bracket	
92	PGZ00108	Clip	
93	PGZ00109	Blower Housing,up	
96	PGZ00110	Ignition Coil	
99	PGZ00111	Electric Starter	
100	PGZ00112	Temperature Sensor	
101	PGZ00113	Bumper pad	
103	PGZ00115	Choke Lever Rack	
104	PGZ00116	Gasket, Air Filter	
105	PGZ00117	Gasket, Carburetor	

PRAMAC

SERVICE & PARTS